


Bird Repeller

Birds

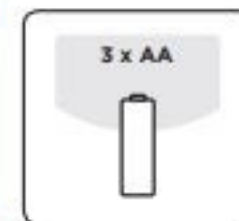


Chases away birds and protects balconies, window sills, terraces, courtyards... from droppings and cooing.

Emits audible signals. Disturbed pigeons change their perch after 2 to 3 weeks and stop leave the protected area.

- Protects an area with a radius of **20 to 40 m²**.
- This device generates sounds of varying frequencies to drive pigeons away from your balconies, terraces, garages, sheds...
- Works with 3 AA **batteries** (not supplied).
- Turn the device off at night.
- Adjustable intensity.
- This device can be heard by humans.



Reference	EAN13	Packaging	Master Carton	Qty MC/pal	QTY pc/pal
WK0020	 5 414099 230203	Blister pack 1 pc	12 pcs	80	960